



Stainless Steel Grid Inserts

Fuse Unit Switch	GFUSE-SS
Flex Outlet Switch	GFLEX-SS
Blank Module Switch	GBLNK-SS
400W 2 Way Push On/Off Dimmer Switch	GD400-SS
10A 2 Way Switch	G12-SS
10A 2 Way & Off Switch	G12C-SS
10A Intermediate Switch	G13-SS
10A 2 Way & Off Retractive Switch	G16-SS
20A DP Switch	G30-SS
20A DP Key Switch	G30KY-SS
20A DP Emergency Light Test Switch	G30KY-SS-EL
20A DP Switch marked Coffee Maker	G30-SS-CM
20A DP Switch marked Dishwasher	G30-SS-DW
20A DP Switch marked Extractor Fan	G30-SS-EF
20A DP Switch marked Fridge Freezer	G30-SS-FF
20A DP Switch marked Fridge	G30-SS-FD
20A DP Switch marked Freezer	G30-SS-FZ
20A DP Switch marked Hob	G30-SS-HB
20A DP Switch marked Cooker Hood	G30-SS-CH
20A DP Switch marked Microwave	G30-SS-MW
20A DP Switch marked Oven	G30-SS-OV
20A DP Switch marked Tumble Dryer	G30-SS-TD
20A DP Switch marked Heater	G30-SS-HT
20A DP Switch marked Heating System	G30-SS-HS
20A DP Switch marked Immersion	G30-SS-IM
20A DP Switch marked Vent	G30-SS-VE
20A DP Switch marked Water Heater	G30-SS-WH
20A DP Switch marked Waste Disposal	G30-SS-WDI
20A DP Switch marked Washer Dryer	G30-SS-WDR
20A DP Switch marked Wine Cooler	G30-SS-WIC
20A DP Switch marked Washing Machine	G30-SS-WM