

See page 138 for technical data and overall dimensions

EMBH106R10C



### RCBOs single pole – trip type B – 10mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type B SP	6	B	10	<b>EMBH106R10C</b>
Eaton RCBO 10A 10kA type B SP	10	B	10	<b>EMBH110R10C</b>
Eaton RCBO 16A 10kA type B SP	16	B	10	<b>EMBH116R10C</b>
Eaton RCBO 20A 10kA type B SP	20	B	10	<b>EMBH120R10C</b>
Eaton RCBO 32A 10kA type B SP	32	B	10	<b>EMBH132R10C</b>

EMBH110R30C



### RCBOs single pole – trip type B – 30mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type B SP	6	B	30	<b>EMBH106R30C</b>
Eaton RCBO 10A 10kA type B SP	10	B	30	<b>EMBH110R30C</b>
Eaton RCBO 16A 10kA type B SP	16	B	30	<b>EMBH116R30C</b>
Eaton RCBO 20A 10kA type B SP	20	B	30	<b>EMBH120R30C</b>
Eaton RCBO 32A 10kA type B SP	32	B	30	<b>EMBH132R30C</b>
Eaton RCBO 40A 6kA type B SP	40	B	30	<b>EMBH140R30C</b>
Eaton RCBO 45A 6kA type B SP	45	B	30	<b>EMBH145R30C</b>

EMBH116R100C



### RCBOs single pole – trip type B – 100mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type B SP	6	B	100	<b>EMBH106R100C</b>
Eaton RCBO 10A 10kA type B SP	10	B	100	<b>EMBH110R100C</b>
Eaton RCBO 16A 10kA type B SP	16	B	100	<b>EMBH116R100C</b>
Eaton RCBO 20A 10kA type B SP	20	B	100	<b>EMBH120R100C</b>
Eaton RCBO 32A 10kA type B SP	32	B	100	<b>EMBH132R100C</b>

EMCH120R10C



### RCBOs single pole – trip type C – 10mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type C SP	6	C	10	<b>EMCH106R10C</b>
Eaton RCBO 10A 10kA type C SP	10	C	10	<b>EMCH110R10C</b>
Eaton RCBO 16A 10kA type C SP	16	C	10	<b>EMCH116R10C</b>
Eaton RCBO 20A 10kA type C SP	20	C	10	<b>EMCH120R10C</b>
Eaton RCBO 32A 10kA type C SP	32	C	10	<b>EMCH132R10C</b>

EMCH110R30C



### RCBOs single pole – trip type C – 30mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type C SP	6	C	30	<b>EMCH106R30C</b>
Eaton RCBO 10A 10kA type C SP	10	C	30	<b>EMCH110R30C</b>
Eaton RCBO 16A 10kA type C SP	16	C	30	<b>EMCH116R30C</b>
Eaton RCBO 20A 10kA type C SP	20	C	30	<b>EMCH120R30C</b>
Eaton RCBO 25A 10kA type C SP	25	C	30	<b>EMCH125R30C</b>
Eaton RCBO 32A 10kA type C SP	32	C	30	<b>EMCH132R30C</b>
Eaton RCBO 40A 6kA type C SP	40	C	30	<b>EMCH140R30C</b>
Eaton RCBO 45A 6kA type C SP	45	C	30	<b>EMCH145R30C</b>

EMCH132R100C



### RCBOs single pole – trip type C – 100mA sensitivity

Description	Rating (A)	Trip type	Sensitivity (mA)	Eaton list number
Eaton RCBO 6A 10kA type C SP	6	C	100	<b>EMCH106R100C</b>
Eaton RCBO 10A 10kA type C SP	10	C	100	<b>EMCH110R100C</b>
Eaton RCBO 16A 10kA type C SP	16	C	100	<b>EMCH116R100C</b>
Eaton RCBO 20A 10kA type C SP	20	C	100	<b>EMCH120R100C</b>
Eaton RCBO 32A 10kA type C SP	32	C	100	<b>EMCH132R100C</b>