



 
ENLITE

MAINS VOLTAGE GU10 DOWNLIGHTS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
LEAVE A COPY FOR THE USER / MAINTENANCE ENGINEER FOR FUTURE REFERENCE

IMPORTANT INSTALLATION INFORMATION

- Installation should be carried out in accordance with the latest edition of the National Wiring Regulations. If in doubt, consult a qualified electrician.
- Maximum Voltage – 240V 50Hz AC.
- Use only with GU10 lamp cap, see luminaire lamp label for maximum wattage.
- **IMPORTANT.** Ensure that ALL electrical connections are tight with no loose strands, including factory made connections.
- These luminaires are for indoor use only.
- Enlite GU10 downlights are to be connected to a 240V mains supply (no transformer is required)
- The main body of Class 2 luminaires **MUST NOT** be connected to an earth terminal.
- IP65 rated luminaires are protected against dust and jets of water. They are suitable for installation in locations containing a bath or shower, as defined by the National Wiring Regulations, Zones 1 & 2 where water jets are likely.



Luminaires not suitable for mounting on normally flammable surfaces when used with a 50W lamp
Can be mounted on a normally flammable surface when used with a lamp that is 35W or lower





This luminaire is not suitable for covering with insulation material.

INSTALLATION INSTRUCTIONS

Before commencing installation or maintenance, ensure electricity is switched off at the mains.

1. Select the required position for the luminaire ensuring the clearances shown in Fig.1 are observed. Beware of joists, water pipes and electric cables. Use the cut-out template on the inside lid of the box to cut a hole in the ceiling for the type of luminaire to be fitted.
2. Connect the mains supply cable(s) to the terminal block. Ensure that there are no exposed conductors or trapped insulation.
LIVE – (Brown) to Terminal Marked L
NEUTRAL – (Blue) to Terminal Marked N
3. Slide the legs of the mounting spring clips into the ceiling cut-out and push the luminaire up into the aperture. Ensure that it is securely located.
4. Insert the lamp into the lampholder and twist in a clockwise direction. Ensure that the lamp is correctly located in the lampholder. Switch on the power supply.

Fig 1.

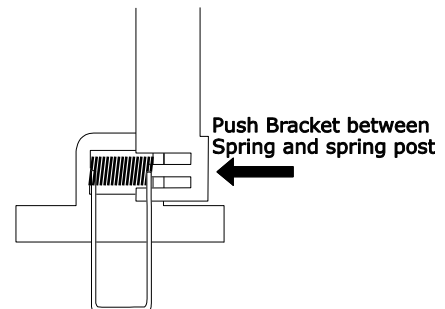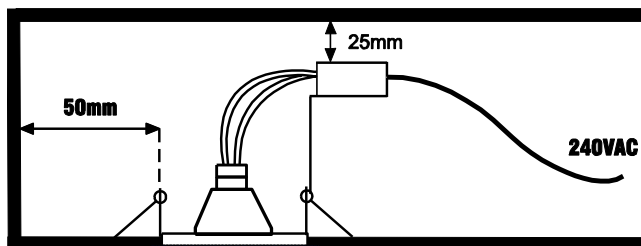

Environmental Protection (W.E.E.E.) – Enlite's WEEE Reg.No. WEE/BG0130YX



Waste Electrical & Electronic Equipment Regulations (WEEE) requires that any of our products showing this marking (left) must not be disposed of with other household or commercial waste. Enlite does not levy any WEEE disposal charges to its customers for affected WEEE related products. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate any such product from other waste types and recycle it responsibly at your local facilities. Check with your Local Authority, Recycling Centre or retailer for recycling advice. If, when you purchased any Enlite product, your supplier included a WEEE disposal fee, you should then contact your supplier for advice on his takeback of the product for the correct disposal.

GUARANTEE

This product is guaranteed in the country of purchase for a period of 3 years from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not in accordance with the current edition of the National Wiring Regulations. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. Enlite does not accept responsibility for any installation costs associated with the replacement of this product. This warranty is in addition to the statutory rights in your country of purchase. Enlite reserves the right to alter specifications without prior notice.

UK Tel: +44 (0) 1727 83 66 11 Email: uk@enlitelighting.com	France Tel: +33 (0) 1 30 11 11 88 Email: france@enlitelighting.com	UAE Tel: +971 (0) 4 328 5489 Email: uae@enlitelighting.com	Australia Tel: +61 (0) 2 9882 6000 Email: australia@enlitelighting.com	South Africa Tel: +27 (0) 11 234 4878 Email: SouthAfrica@enlitelighting.com
--	--	--	--	---

Website: www.enlitelighting.com

Document version – EN-GU10_MAINSDOWNLIGHT_V1_16_ENG&FRE.DOC