Prestige 2com



cable management | perimeter and distribution

www.mkelectric.co.uk

Main Carrier Straight Cover Coupler Assembly Lid Joint Cover Internal Corner Assembly

CONSISTS OF COVER AND CARRIER External
Corner
Assembly
CONSISTS OF
COVER, CARRIER
AND RADIUS
INSERT

DIMENSIONS 210 X 60MM



VTS2001WHI 3 METRE LENGTHS

VTS2001D1WHI 2 METRE LENGTHS
FOR (NON UK) MARKETS

6m

NOT SUPPLIED WITH LID (COVER)



VTS5WHI 3 METRE LENGTHS

VTS5D1WHI 20m 2 METRE LENGTHS FOR (NON UK) MARKETS

30m

NOTE each main carrier requires two straight covers



2

VTS2005WHI



VTS2010WHI USED TO JOIN 2 COVER

USED TO JOIN 2 COVER PIECES AT REMOTE POINT FROM COUPLER



VTS2004WHI
INCLUDES ADDITIONAL
SCREW FIXING FOR
EXTRA SECURITY
50MM RADIUS BEND



VTS2003WHI
INCLUDES ADDITIONAL
SCREW FIXING FOR
EXTRA SECURITY
50MM RADIUS BEND

End Cap Assembly End Cap Cover and Retainer Cable Retainer Crossover Bridge Mini Trunking Adaptor Trunking Adaptor 50 X 50mm



VTS2006WHI END CAP ASSEMBLY

2

VTS2015WHI END CAP RETAINER

VTS2016WHI END CAP COVER

1



VTS2011WHI CABLE RETAINER

VTS2090WHI CROSSOVER BRIDGE



VTS2081WHI
YT1-YT3 MINI TRUNKING
ADAPTOR.
USE APPROPRIATE YEA

ADAPTOR.
USE APPROPRIATE YEA
ADAPTOR (YEA1-YEA3)
TO CONNECT
MINI TRUNKING

VTS2084WHI YT4 MINI TRUNKING ADAPTOR



10

VTS2050WHI 50 X 50MM TRUNKING ADAPTOR

II NG

10

10