


# FLFR INSTRUCTIONS

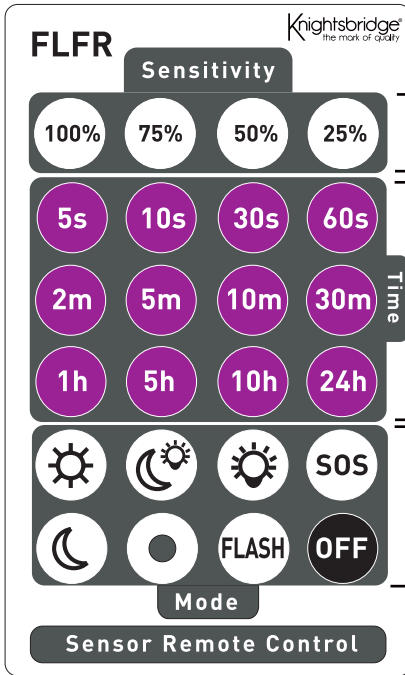

Sensitivity can be changed from 100% (7m to 8m) to 25% (1m to 2m)

Time duration adjustable from 5 seconds to 24 hours

The pre-set modes can be changed (please see below for further details)

Symbol	Mode	Description
	Daylight mode	Sensor will operate night and day
	Night mode	Sensor only operates during dusk to dawn (<50lx)
	Photocell mode	Luminaire remains on during dusk till dawn (<50lx)
	No function	N/A
	Manual override mode	This means the luminaire can be kept on, bypassing the sensor
	Flash mode	Luminaire flashes approximately every second
	SOS mode	Flashes the SOS pattern in Morse code
	Off mode	Switches off the luminaire




Select time from panel. Luminaire will flash to confirm selection.

All the buttons on the remote control have memory function. This applies if the luminaire is switched on and off with the remote control. If the power is cut off at the mains, the luminaire will revert to the default setting.

### Step 3 – Sensitivity Adjustment

Select the sensitivity from the panel shown below. Luminaire will flash to confirm selection

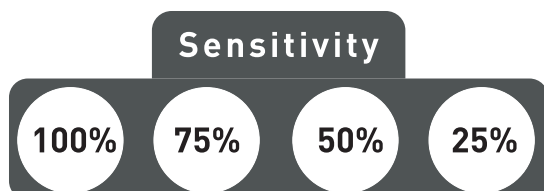

Percentage	Detection distance
100%	7-8m
75%	6-5m
50%	3-4m
25%	1-2m