


# Accessories


## Selection overview

### OT16F...OT125F\_C

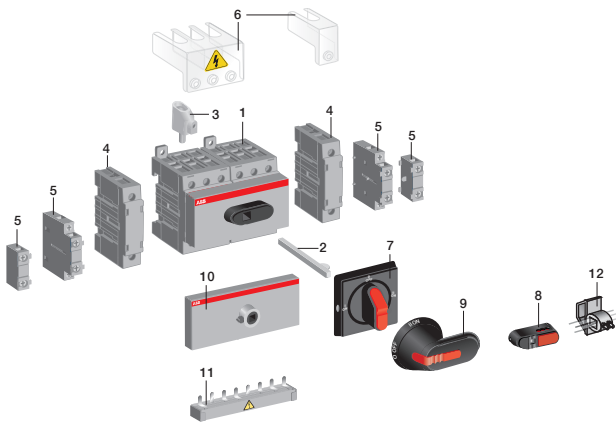


- 1 Manual change-over switch | 2 Extended shaft | 3 Terminal clamp | 4 Fourth pole | 5 Auxiliary contact  
6 Terminal shroud | 7 Selector type handle | 8 Handle knob | 9 Pistol type handle | 10 Conversion kit  
11 Parallel connection kit | 12 Cam attachment for interlocking

### OT160...OT2500\_C

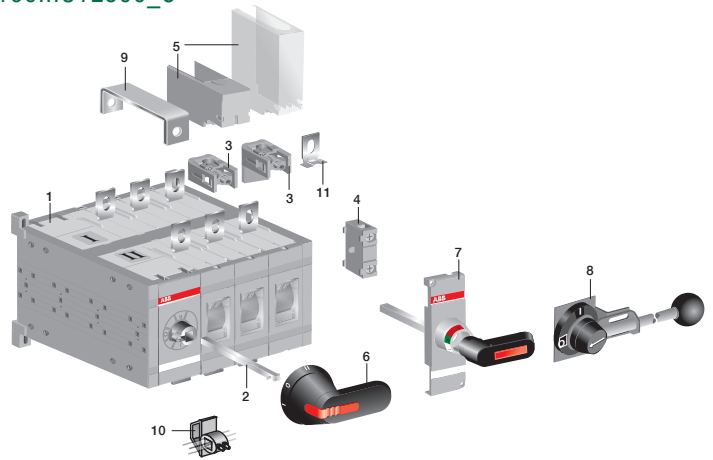


- 1 Manual change-over switch | 2 Extended shaft | 3 Terminal clamp | 4 Auxiliary contact  
5 Terminal shroud | 6 Pistol type handle | 7 Direct mounting type handle | 8 Metallic handle  
9 Bridging bar | 10 Cam attachment for interlocking | 11 Voltage sensing connector

### OT3200\_C

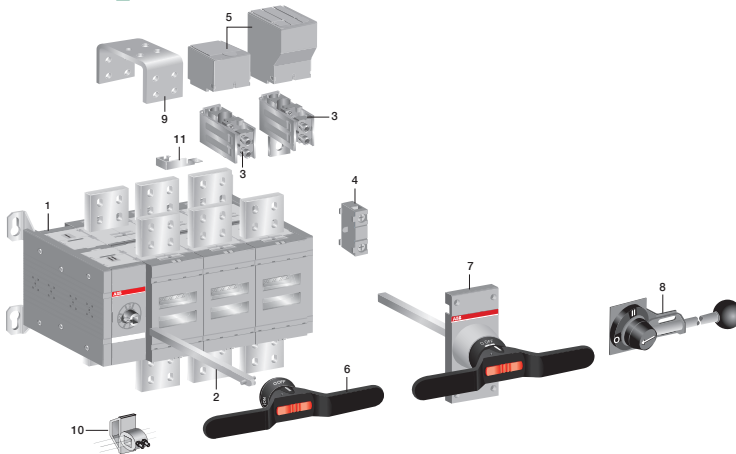


- 1 Manual change-over switch | 2 Extended shaft | 3 Terminal clamp | 4 Auxiliary contact  
5 Terminal shroud | 6 Pistol type handle | 7 Direct mounting type handle | 8 Metallic handle  
9 Bridging bar | 10 Cam attachment for interlocking | 11 Voltage sensing connector

### OT160...OT800\_Y

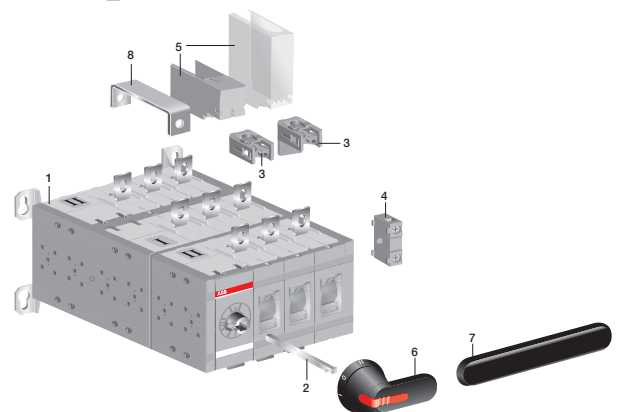


- 1 Manual bypass switch | 2 Extended shaft | 3 Terminal clamp | 4 Auxiliary contact  
5 Terminal shroud | 6 Pistol type handle | 7 Handle extension | 8 Bridging bar

### OTM40F...OTM125F\_C

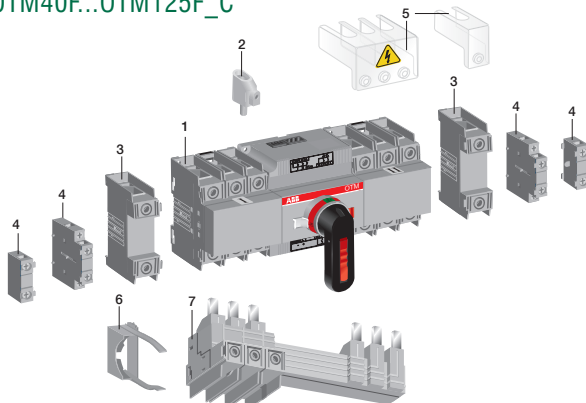

- 1 Motorized change-over switch | 2 Terminal clamp | 3 Fourth pole | 4 Auxiliary contact  
5 Terminal shroud | 6 Handle storage clip | 7 Parallel connection kit

### OTM160...OTM2500\_C

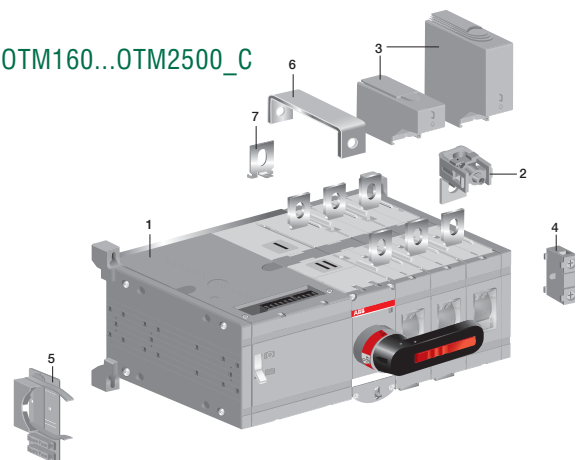


- 1 Motorized change-over switch | 2 Terminal clamp | 3 Terminal shroud | 4 Auxiliary contact  
5 Storage for handle and fuses | 6 Bridging bar | 7 Voltage sensing connectors

# Accessories

## Selection overview

OTM160...OTM1600\_D\_C

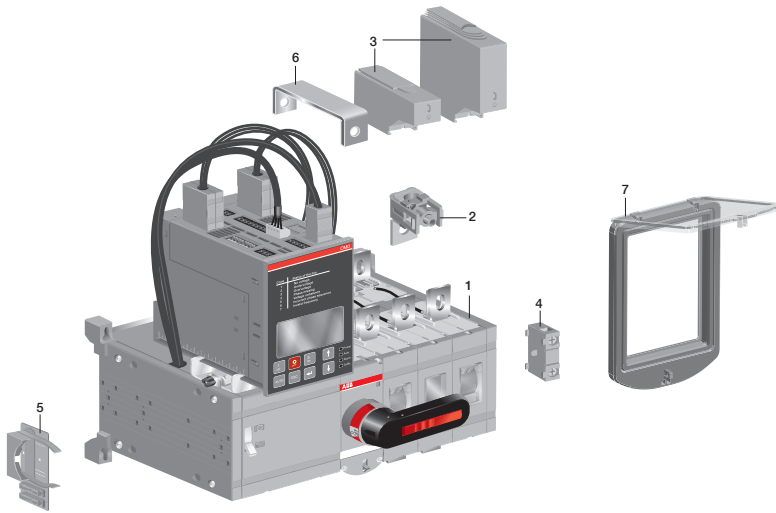

- 1 Automatic transfer switch | 2 Terminal clamp | 3 Terminal shroud | 4 Auxiliary contact  
5 Storage for handle and fuses | 6 Bridging bar | 7 Cover plate