



Starter Distribution Boxes

- ▶ Use to connect one group of luminaires.
- ▶ All flex7 Lighting Distribution Boxes support standard (on/off) or dimmable lighting control in emergency or non-emergency versions.

DESCRIPTION	PART NO.
2-way Starter Distribution Box	FSU02
4-way Starter Distribution Box	FSU04
6-way Starter Distribution Box	FSU06
8-way Starter Distribution Box	FSU08
10-way Starter Distribution Box	FSU10
12-way Starter Distribution Box	FSU12



Dual Control Distribution Boxes

- ▶ Use to control 2 groups of luminaires independently of each other. One Control Module is required for each group of luminaires.
- ▶ All flex7 Lighting Distribution Boxes support standard (on/off) or dimmable lighting control, emergency or non-emergency.
- ▶ Ideal for controlling luminaires adjacent to windows separately to those further away.
- ▶ The box's split point can be chosen from the list below:

DESCRIPTION	PART NO.
2-way Dual Control Starter Distribution Box, Split 1/1	FSU02DC1/1
4-way Dual Control Starter Distribution Box, Split 3/1	FSU04DC3/1
4-way Dual Control Starter Distribution Box, Split 2/2	FSU04DC2/2
6-way Dual Control Starter Distribution Box, Split 5/1	FSU06DC5/1
6-way Dual Control Starter Distribution Box, Split 4/2	FSU06DC4/2
6-way Dual Control Starter Distribution Box, Split 3/3	FSU06DC3/3
8-way Dual Control Starter Distribution Box, Split 7/1	FSU08DC7/1
8-way Dual Control Starter Distribution Box, Split 6/2	FSU08DC6/2
8-way Dual Control Starter Distribution Box, Split 5/3	FSU08DC5/3
8-way Dual Control Starter Distribution Box, Split 4/4	FSU08DC4/4
10-way Dual Control Starter Distribution Box, Split 9/1	FSU10DC9/1
10-way Dual Control Starter Distribution Box, Split 8/2	FSU10DC8/2
10-way Dual Control Starter Distribution Box, Split 7/3	FSU10DC7/3
10-way Dual Control Starter Distribution Box, Split 6/4	FSU10DC6/4
10-way Dual Control Starter Distribution Box, Split 5/5	FSU10DC5/5
12-way Dual Control Starter Distribution Box, Split 11/1	FSU12DC11/1
12-way Dual Control Starter Distribution Box, Split 10/2	FSU12DC10/2
12-way Dual Control Starter Distribution Box, Split 9/3	FSU12DC9/3
12-way Dual Control Starter Distribution Box, Split 8/4	FSU12DC8/4
12-way Dual Control Starter Distribution Box, Split 7/5	FSU12DC7/5
12-way Dual Control Starter Distribution Box, Split 6/6	FSU12DC6/6