

30m CAI Approved Satellite/ Digital Coaxial Cable

USER GUIDE

Top quality fully screened coaxial cable recommended for Satellite and Digital Aerial installations

Kit Contents

30m PF100 coaxial cable


- 2 x Coaxial Plugs for aerial connections
- 2 x Screw on F Plugs for satellite connections

Fitting Coaxial Connectors

- 1 Unscrew coax plug housing and slide cap over cable.
- 2 Strip 23mm of cable outer sheath. Gather copper braid, wrap around outer sheath, slide claw over braid and crimp.
- 3 Strip 18mm of inner insulation to leave 5mm exposed
- 4 Undo screw on plug/clamp, slide clamp over inner wire & tighten screw. Reassemble plug
- 5 Trim inner wire flush with plug end.




Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

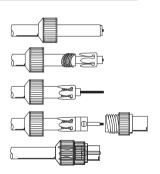

Fitting F Connectors

Prepare the Coax Cable: If a weather boot is to be used fit the rubber weather boot to the aerial end of the cable first. Strip the end of the cable as shown in Fig. 1. Once you have stripped the cable, twist the braid and pull it back on itself, make sure that no braid is touching the copper core, this will cause a short on the cable and you will not get any signal.

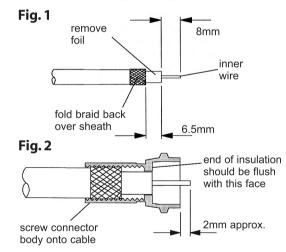

For further information or any queries please contact

Customer Careline: 0901 293 0038

Calls are charged at £1 per minute from a BT landline. Call charges from other networks may vary

Technical Support: http://technical.philex.com

© Philex Electronic Ltd. 2009 v2.1