



Read these instructions before commencing installation & retain them for future reference.

**Installation Procedure**

Place the rods into the 3 holes around the edge of the base plate and secure with 3 hex nuts. Fix top plate using the last 3 hex nut as per fig. 1. Ensuring that the power is turned off.

Dig a suitable hole 600mm deep and 250mm round to take the root kit, place the root kit over the supply cable and back fill with gravel until the root kit top plate is at the required level. Ensuring the top plate stays level back fill with gravel. No soil should be in contact with the root kit as depending on acidity of the soil this can reduce the life/warranty of the root kit.

Terminate the bollard to the mains supply cable as per the bollard instructions and then fit the bollard to the root kit using the 3 washers and domed hex nuts supplied in the root mounting kit as per fig. 2.

Fig. 1




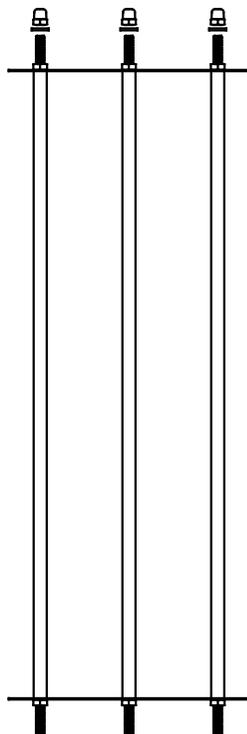


Fig. 2

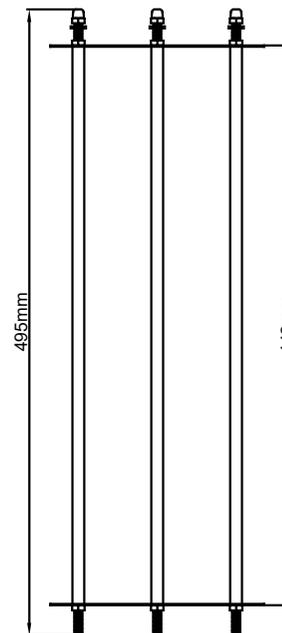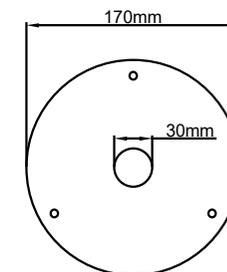

**KSR9914**

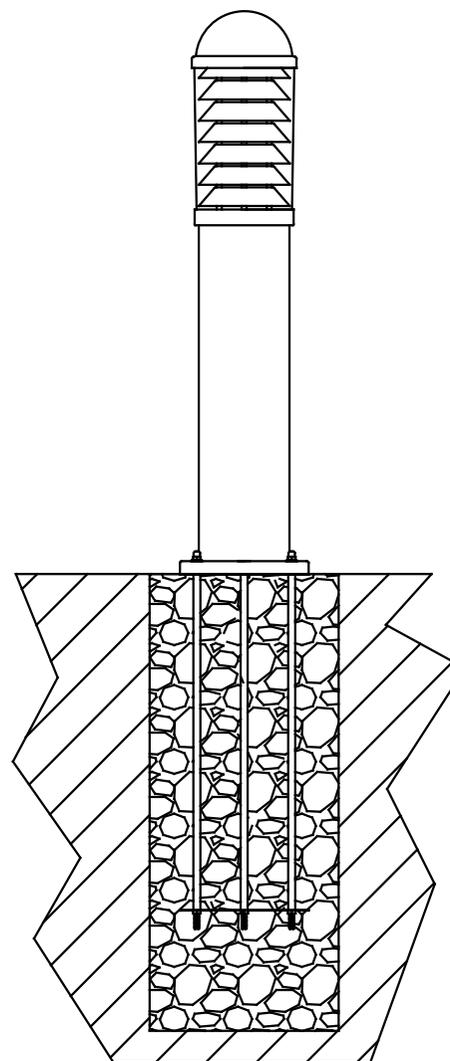

KSR Lighting Aftersales: 023 92 674343  
E-mail: info@ksr-lighting.co.uk