

Installation Instructions

Luminaire Code(s) – **AENLED/3M/W & /SG**

General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

Important Safety


1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.
5. **Max Ambient Temperature 25°C**

INSTALLATION

- Select a suitable mounting surface and provide a suitable power supply. The luminaire is Class II and therefore does not require an Earth connection.
- Remove the front bezel. Remove the bottom of the bezel first before gently tilting to remove completely. Unscrew the 4x screws retaining the legends and remove all to aid installation.
- Mount the housing using either the central Besa box mounting or the 3x allocated mounting points.
- Connect the incoming supply cable to the terminations ensuring correct polarity is observed (please see below for electrical connections).

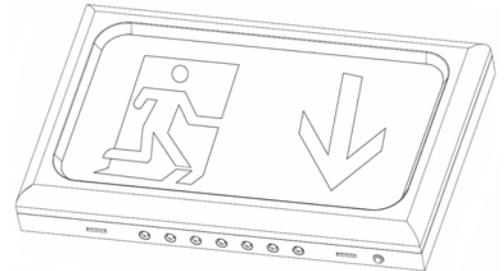

Electrical Connection

Connect as follows:-

PERMANENT LIVE (Lch)	BLACK (continuous)
SWITCHED LIVE (Lsw)	BROWN (switched)
NEUTRAL (N)	BLUE

- Connect the battery plug to the PCB board where indicated.
- Select the desired legend, align and attach to the adhesive strips on the back plate and attach all to the housing by replacing the 4x retaining screws
- Gently reposition the front bezel.

Note

- Switch on the mains supply. Check the unit operates correctly.
- Check the LED indicator is ON.
- Leave the unit on charge for one hour, then remove the supply to simulate mains failure and check the lamp operates in emergency mode.
- The unit requires 24 hours to fully charge the battery and achieve 3 hours emergency operation.

Maintenance

- Daily: Check LED indicator is illuminated. If the product is maintained check the lamps operate.
 - Monthly: Check the unit operates in emergency mode for ¼ of the rated duration.
 - Bi-Annually: Check the unit operates of 1 hour for the 3 hour duration.
 - Annually: Check the unit operates for the full 3 hour duration.
 - Annually thereafter: Check the unit operates for the full 3 hour duration.
- If the unit fails to provide the required duration, replace the battery with one that meets the same specification.

Warning

- Disconnect the mains supply and unplug the battery leads before working on the unit.
- Failure to comply with these instructions may result in irreparable damage to the emergency control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions.

Operating and Recommended Routine Test Procedure

MONTH	TEST	FIRST YEAR		SECOND YEAR		THIRD YEAR		FORTH YEAR		FIFTH YEAR	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	FUNCTIONAL										
2	FUNCTIONAL										
3	FUNCTIONAL										
4	FUNCTIONAL										
5	FUNCTIONAL										
6	FUNCTIONAL										
7	FUNCTIONAL										
8	FUNCTIONAL										
9	FUNCTIONAL										
10	FUNCTIONAL										
11	FUNCTIONAL										
12	3 HOUR										

IP20  



Disposal of Electronic Equipment WEEE Directive 2002/96/EC
 This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.

