



Important Safety Notice

It is the responsibility of the person installing the electrical equipment to ensure that the installation meets the requirements of the IET wiring regulations and is therefore 'fit for purpose'. Factors such as correct selection of components, cable sizing, protective devices and Earth bonding are all critical and should be checked prior to full testing and power-up. Any other regulations applicable to the equipment being installed such as the Machinery Directive and current health and safety legislation must also be adhered to.

All connections (including factory made) must be checked for the correct tightness prior to commissioning of the electrical installation.

All connections should be checked periodically to ensure correct tightness.

DO NOT USE POWER TOOLS ON THESE PRODUCTS




KEMA Certified EN 60947-1 & 3 Compliant IP65




Data	Range	Units	LBF3153PNLME LBF3153PSNME	LBF4003PNLME LBF4003PSNME
BS88 Fuse size	-	-	B1-B3	B1-B4
Rated thermal current I_{th} at 40°C	Amps	A	315	400
Rated insulation voltage U_i	Volts	V	1000	1000
Rated dielectric strength	Volts	kV	8	8
Rated impulse voltage U_{imp}	Volts	kV	12	12
Rated operational current I_e at 400V AC-22	Amps	A	315	400
Rated operational current I_e at 400V AC-23	Amps	A	315	400
Rated operational power P_e at 400V AC-23	Watts	kW	160	220
Rated breaking capacity	Amps	A	2600	3200
Rated making capacity	Amps	A	3150	4000
Rated short circuit making current (rms) with fuses fitted	Amps	kA	80	80
Rated short circuit withstand current (rms) with fuses fitted	Amps	kA	80	80
Minimum number of mechanical operations	-	Cycles	10,000	10,000
Minimum number of electrical operations @ 400V AC-23	-	Cycles	1,000	1,000
Terminal Capacity (rigid copper cable)	-	mm ²	240	240
Lug bolt size	-	-	M10	M10
Maximum size of busbar connection	-	mm	6x40	6x40
Tightening torque	-	Nm	24	24

Enclosure Dimensions

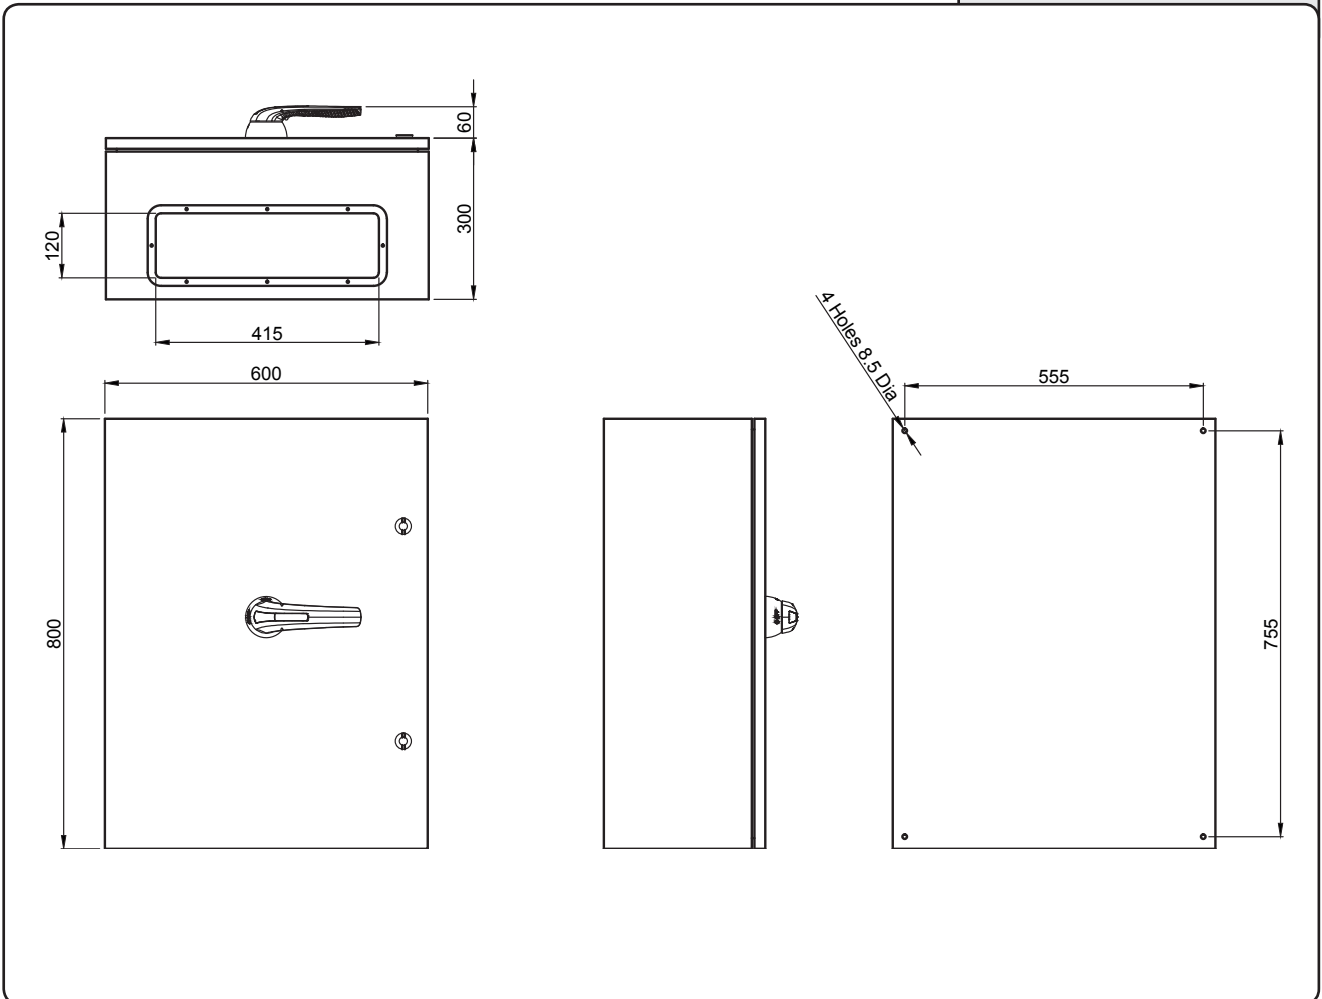



Terminal Configuration

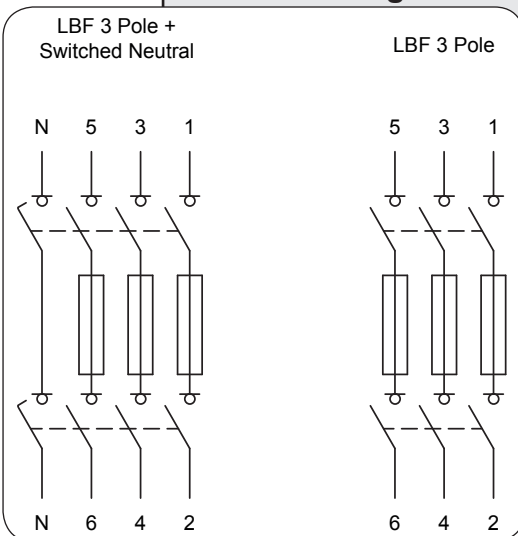

Maximum BS88 Fuse Size


	A	B \varnothing	D	G	H	J
Fuses	Max	Max	Max	Nom	Nom	Min
B1	70	37	138	111	8,7	11
B2	77	42				
B3	83	66				
B4						

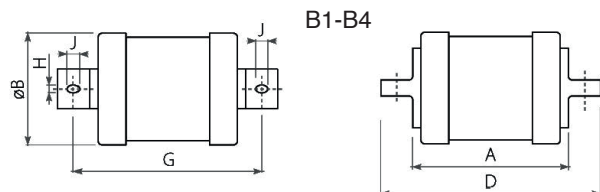

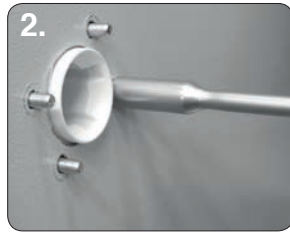



Handle Assembly:

1. Ensure that the handle is in the off position and locate the handle on to the door with the handle showing the off position at 9 o'clock
2. Tighten the four M5 flange nuts to 1.5Nm

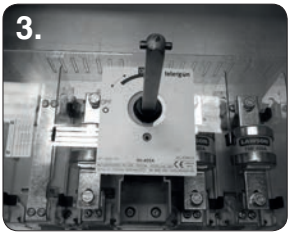


Shaft Assembly:

3. Ensure that the switch is in the off position and fully insert the shaft into the switch with the cross pin in a horizontal position
4. Tighten the M5 shaft grub screw to 1.2Nm using a 2.5mm A/F allen key

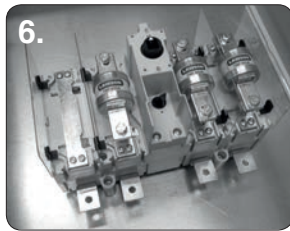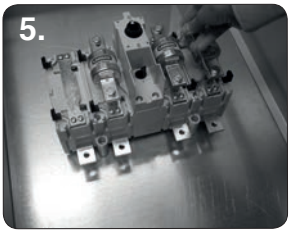


Fuse Shroud Assembly: (160-800A SWITCH FUSE ONLY)

- 5/6. Install the four upright shrouds into the corresponding clips
7. Install fuse shroud into the corresponding clips

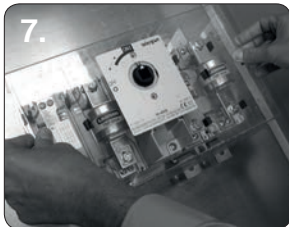

Padlock Operation:

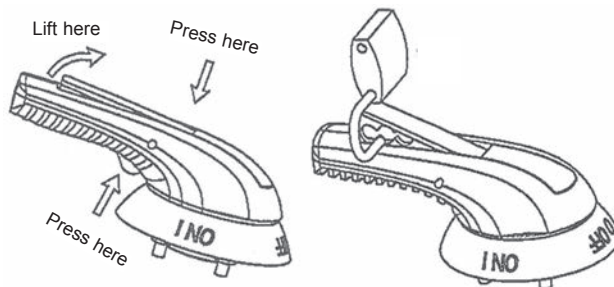

Door Interlock Defeat Mechanism (For Authorised Personnel Only):

⚠ WARNING! ACCESS TO LIVE PARTS

- Ensure that the door is closed and the handle is in the on position
- Locate the hole on the right side of the handle, then push and hold a small pin into the hole to activate the defeat mechanism
- The door can now be opened in the on position. Remove pin and close the door to reset the mechanism

