




Holywell Batten Single & Twin

20W, 30W & 40W Single / 40W, 50W & 60W Twin

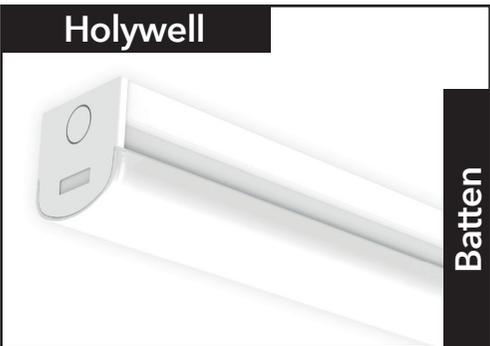

Batten

STOP

READ THESE INSTRUCTIONS THOROUGHLY BEFORE INSTALLATION KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT:
This product must be installed by a qualified electrician or competent person, and in accordance with current building and IET wiring regulations.

BOX CONTENTS


This lighting fixture has been properly packed to avoid damage during transit. Before commencing with the installation carefully inspect the luminaire to confirm there is no damage. **DO NOT INSTALL** if any damage has occurred to the fixture or any of its components.

- Light Fitting
- Instruction Manual
- Fixing Kit

TOOLS REQUIRED

- Drill
- Screwdriver
- Cable

INSTALLATION INSTRUCTIONS

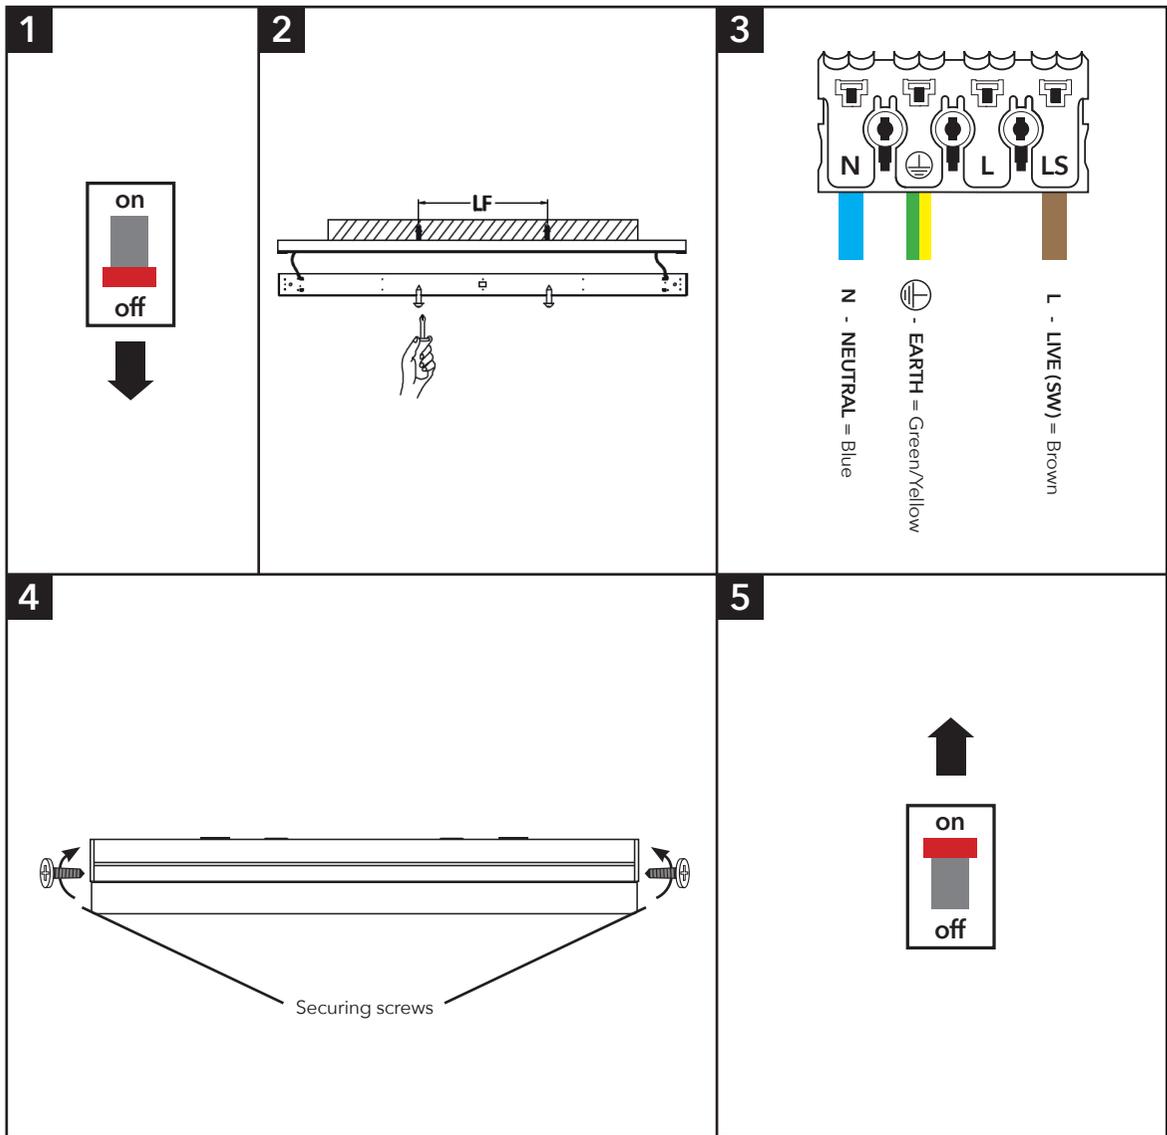

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION.

WARNING: Risk of electric shock! Isolate the mains power before proceeding.

- Turn off the mains power before performing inspections, installation, or removal
- Verify that the supply voltage is correct by comparing it with the luminaire label information
- It is the installers responsibility to ensure installation is suitable for the total load of the luminaire(s). The supply cable, fuses/circuit breakers must be correctly rated for the electrical load and considering for any transient inrush currents that may occur
- Do not perform insulation strength or resistance tests on installed luminaire(s) connected

1. Isolate the circuit
2. Separate the light base from the diffuser and secure the base to the desired surface using the fixing kit provided
3. Route the mains cable through desired entry and wire as per diagram shown
4. Re-fit the diffuser and use securing screws to lock it in
5. Switch the mains power back on and check the light fitting illuminates



Manby Business Park, Manby, Lincolnshire, LN11 8UT
Lumineux is a B&T Associates Ltd company.

Technical Helpline: +44 (0)1507 328031

www.lumineux.co.uk

DISPOSAL


Disassembly instructions for end of life disposal available on website.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Please recycle where facilities exist or check with your Local Authority. RoHS - All components and materials used in this product are RoHS 2002/95/EC compliant.

Specifications may change from time to time. The information contained in this leaflet is for guidance only and should not be considered as always accurate and should be treated as not representative.

HOLYWELL BATTEN DIMENSIONS

Part No.	Description	Watts	L (mm)	W (mm)	H (mm)	LF (mm)	Weight
430703	Holywell 4ft Batten Single	20W	1203	64	66	600	1.25Kg
430704	Holywell 4ft Batten Twin	40W	1203	64	66	600	1.25Kg
430705	Holywell 5ft Batten Single	30W	1503	64	66	600	1.55Kg
430706	Holywell 5ft Batten Twin	50W	1503	64	66	600	1.55Kg
430707	Holywell 6ft Batten Single	40W	1803	64	66	600	1.85Kg
430708	Holywell 6ft Batten Twin	60W	1803	64	66	600	1.85Kg

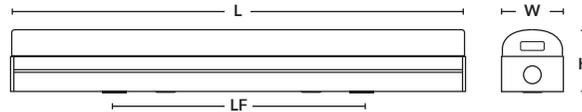

Installation Engineers Contact Details:		Luminaire Reference / Location
Name:	Tel:	


Luminaire Details:	Full Recharge Duration 24 Hours	Emergency Duration 3 Hours	Lamp Type LED
--------------------	--	-----------------------------------	----------------------

ROUTINE TEST RECORD										
Type Test	Year 1		Year 2		Year 3		Year 4		Year 5	
	Signed	Date								
Functional 1										
Functional 2										
Functional 3										
Functional 4										
Functional 5										
Functional 6										
Functional 7										
Functional 8										
Functional 9										
Functional 10										
Functional 11										
3hr Duration 12										

Wiring instructions for units equipped an with EMERGENCY function

Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1

1. Connect incoming earth cable to 'Earth' terminal on connector block.
2. Connect incoming neutral cable to 'Neutral' terminal on connector block.
3. For the emergency unit to work correctly, please ensure that an uninterrupted permanent live feed is present and is connected directly to the 'Permanent Live' terminal of the mains terminal block. Please ensure there are no switches, PIRs etc within the permanent live feed, constant switching of the emergency pack could result in premature battery failure.
4. Connect incoming switched live cable to the terminal marked "Switched Live"
5. There should be a loose flying lead connected to the battery. This needs to be attached to the socket from the emergency control unit.
6. Following power up the green LED indicator should illuminate to indicate charging. If power to the unit is disrupted or isolated, the unit indicating green LED will switch off, triggering the emergency LEDs to illuminate.
7. Please allow 24 hours charge before first emergency test.

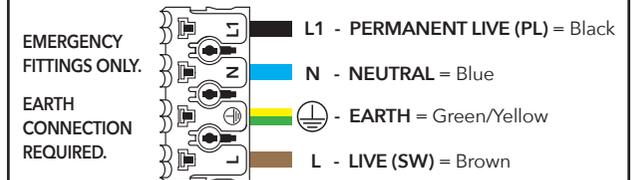

WARRANTY

This luminaire is warranted for a period of 3 years from the date of purchase**. The backup battery pack in the emergency version is warranted for a period of 12 months. The warranty could be invalidated should the light fitting not be installed according to these instructions, outside the scope of the specification or the product has been altered or tampered with in any way. Please see website for terms and conditions.

PRODUCT TEMP SPECIFICATION

Standard 0 to +40°C
Emergency 0 to +30°C

Self-Test EMERGENCY function

The self-test version of emergency is fitted with control gear that will carry out periodic functional tests every 1 month and full duration test every 12 months.

Status	Description
	Standby, System OK Mains Operation, battery is charged
	Function test underway Function test underway
	Duration test underway Duration test underway
	Lamp failure Open Circuit or Short Circuit or LED failure
	Battery capacity failure Battery failed duration test
	Battery fault Incorrect battery voltage or Short Circuit or Open Circuit
	Battery Operation Emergency mode: Mains disconnected or Mains failure

This product contains a light source of energy efficiency Class E.